



3 Watt Submersible, Warm White, Low Voltage • LED4WW

Underwater LED Light

Instructions for Operation • Safety • Warranty

Thank you for purchasing an EasyPro submersible LED pond light. With this warm, white LED light you can make your fountain glow, illuminate your pond from within, highlight your waterfall and extend the enjoyment of your water feature in the evening hours. The LED4WW can be used in the landscape out of the water or as a submersible underwater light with other warm white LED or halogen fixtures.

LED4WW Specs:

- Aluminum housing, HDPE base
- Integrated driver
- Power usage at 12v AC: 3 watts
- 37° beam angle
- Color Temperature: 2800° - 3000° K
- 15 ft. of #18-2, w/Quick Plugs
- 2 year warranty
(Magnetic 12 vac transformer required)
- Free of UV/IR radiation
- Mercury free, RoHS compliant



Safety and Electrical Connections:

- 1 Always disconnect the electrical supply before handling, maintaining, repairing or installing any pond equipment.
- 2 Light(s) must be attached to a 12 volt UL listed magnetic transformer.
- 3 Never hook the lights directly to a 120 volt or higher outlet.
- 4 Connect the transformer only to a 120 volt receptacle that is protected by a Ground Fault Circuit Interrupter (GFCI).
- 5 Do not use this product in bathrooms or swimming pools.
- 6 All electrical work must be performed by a qualified technician. Always follow the National Electrical Code (NEC) or the Canadian Electrical Code as well as all local, state and provincial codes. Code questions should be directed to your local electrical inspector. Failure to follow electrical codes and OSHA safety standards may result in personal injury or equipment damage. Failure to follow manufacturer's installation instructions may result in electrical shock, fire hazard, personal injury or death, damaged equipment, provide unsatisfactory performance and may void manufacturer's warranty.

Installation for LED Light:

- 1 Before installing the product make sure to check in the box for damaged or missing parts. Contact EasyPro immediately if pieces are missing or damaged.
- 2 Disconnect power before installing the lights.
- 3 Assemble optional base to fixture with bolt/nut provided. Some applications may not require base.
- 3 Place the light in the desired location of your water feature or landscape.
- 4 Adjust the angle of the light by the bolt on the side of light.
- 5 Ballast the base with rock or other suitable item to keep light fixture in place.
- 6 Run the cable back to the transformer. Connect leads to transformer.
- 7 LED4WW uses 3 watts, size transformer appropriately.
- 8 Install transformer on a timer and enjoy.

EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **two years** from the date of purchase. LED4WW fixtures must be installed on a magnetic 12v AC low voltage system. Removal of Quick Connect ends will void warranty. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers. This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim. All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEAREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.



800-448-3873 • Grant, Michigan
www.easypro.com